


Настройка беспроводного соединения (wifi) на модеме Промсвязь 201L(xDSL).


Для входа в настройки модема введите в адресной строке Вашего браузера IP-адрес **192.168.1.1** и нажмите «**Enter**».



В открывшемся окне в поле «**Username**» укажите **admin**, в поле «**Password**» - **admin**.

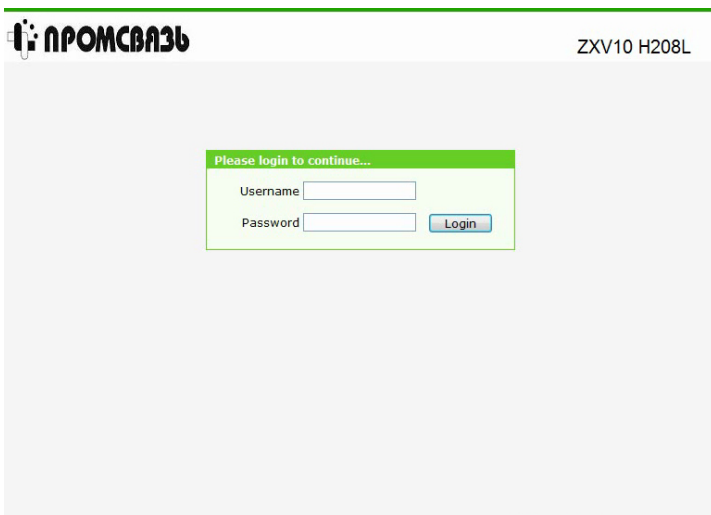

Нажмите кнопку «**Login**».

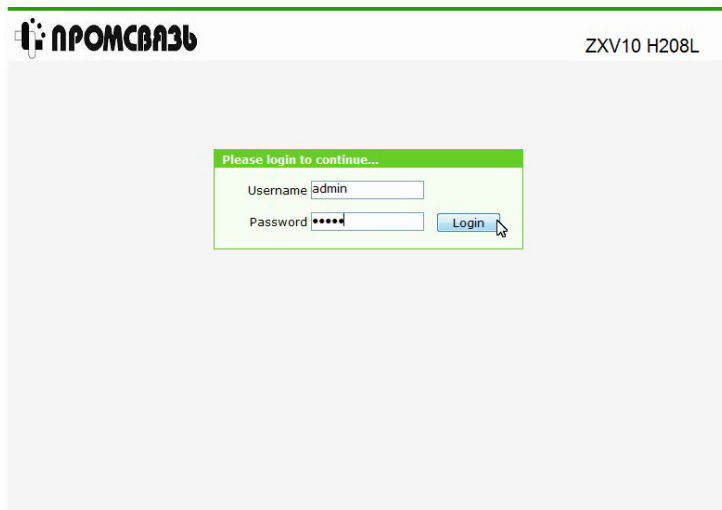

В основном меню сверху выберите вкладку «Network», далее слева раздел «WLAN».

ПРОМСВЯЗЬ ZXV10 H208L

Status Network Security Application Administration Logout

-WAN

- WAN Connection
- Port Mapping
- WLAN
- LAN
- Routing

Type: PPPoE

Connection Name: Create WAN Connection

New Connection Name: []

Enable NAT:

Enable VLAN:

VLAN ID: []

802.1p: 0

Enable DSCP:

DSCP: []

VPI/VCI: []

Encapsulation Type: LLC

Service Type: UBR

MTU: 1400

PPPoE pass-through:

Username: []

Password: []

Выберите подраздел «Multi-SSID».

ПРОМСВЯЗЬ ZXV10 H208L

Status Network Security Application Administration Logout

WLAN

- WAN
- Basic
- Multi-SSID
- Security
- Access Control List
- Associated Devices
- LAN
- Routing

Choose SSID: SSID1

Hide SSID:

Enable SSID:

Enable SSID Isolation:

Maximum Clients: 8 (1 ~ 32)

SSID Name: ZTE (1 ~ 32 characters)

Priority: 0

Submit Cancel

Copyright © 2011 ZTE Corporation. All rights reserved.

Поставьте «галочку» в поле «Enable SSID».

ПРОМСВЯЗЬ ZXV10 H208L

Status Network Security Application Administration Logout

WLAN

- WAN
- Basic
- Multi-SSID
- Security
- Access Control List
- Associated Devices
- LAN
- Routing

Choose SSID: SSID1

Hide SSID:

Enable SSID:

Enable SSID Isolation:

Maximum Clients: 8 (1 ~ 32)

SSID Name: ZTE (1 ~ 32 characters)

Priority: 0

Submit Cancel

Copyright © 2011 ZTE Corporation. All rights reserved.

Для установки имени сети Wi-Fi используйте поле «SSID Name».

Укажите в данном поле уникальное имя для Вашей беспроводной сети.

Для сохранения настроек нажмите кнопку «Submit».

The screenshot shows the web interface for a ZTE ZXV10 H208L device. The top navigation bar includes 'Status', 'Network', 'Security', 'Application', 'Administration', and 'Logout'. The left sidebar shows a tree view with 'WAN' expanded and '-WLAN' selected. Under '-WLAN', 'Basic' is highlighted. The main content area displays the following configuration options:

- Choose SSID:
- Hide SSID:
- Enable SSID:
- Enable SSID Isolation:
- Maximum Clients: (1 ~ 32)
- SSID Name: (1 ~ 32 characters)
- Priority:

At the bottom, there are 'Submit' and 'Cancel' buttons. The footer contains the text: 'Copyright © 2011 ZTE Corporation. All rights reserved.'

Для изменения пароля к сети Wi-Fi выберите подраздел «Security» раздела «WLAN».

The screenshot shows the web interface for a ZTE ZXV10 H208L device, now on the 'Security' page under the '-WLAN' section. The configuration options are:

- Choose SSID:
- Authentication Type:
- WPA Passphrase: (8 ~ 63 characters)
- Enable WPA Group Key Update:
- WPA Group Key Update Interval: sec
- WPA Encryption Algorithm:

At the bottom, there are 'Submit' and 'Cancel' buttons. The footer contains the text: 'Copyright © 2011 ZTE Corporation. All rights reserved.'

Очистите поле «WPA Passphrase» и введите пароль, который в дальнейшем будет использоваться при подключении к Вашей сети Wi-Fi.

This screenshot is identical to the previous one, showing the 'Security' configuration page. The 'WPA Passphrase' field, which contains '12345678', is highlighted with a mouse cursor, indicating the step to clear and change the password.

Для сохранения настроек нажмите кнопку «Submit».

The screenshot shows the web management interface for a ZTE ZXV10 H208L device. The interface is in Russian and features a green header with the logo 'ПРОМСВЯЗЬ' and the model name 'ZXV10 H208L'. A navigation menu at the top includes 'Status', 'Network', 'Security', 'Application', 'Administration', and 'Logout'. On the left, a sidebar menu lists 'WAN', '-WLAN', 'Basic', 'Multi-SSID', 'Security', 'Access Control List', 'Associated Devices', 'LAN', and 'Routing'. The main content area is titled 'WLAN' and contains the following configuration options:

- Choose SSID:
- Authentication Type:
- WPA Passphrase: (8 ~ 63 characters)
- Enable WPA Group Key Update:
- WPA Group Key Update Interval: sec
- WPA Encryption Algorithm:

At the bottom of the configuration area, there are two buttons: 'Submit' and 'Cancel'. The footer of the page reads 'Copyright © 2011 ZTE Corporation. All rights reserved.'

Настройка беспроводного соединения на модеме завершена!

При возникновении вопросов необходимо обратиться в службу технической поддержки по номеру 123.