 



# Настройка беспроводного соединения (wifi) на модеме

## Промсвязь 208L (xDSL).


Для входа в настройки модема введите в адресной строке Вашего браузера IP-адрес **192.168.1.1** и нажмите «**Enter**».



В открывшемся окне в поле «**Username**» укажите **admin**, в поле «**Password**» - **admin**.

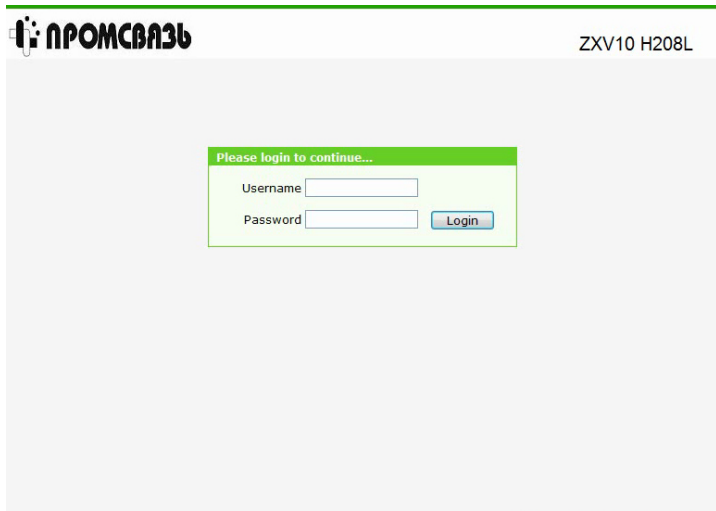

Нажмите кнопку «**Login**».

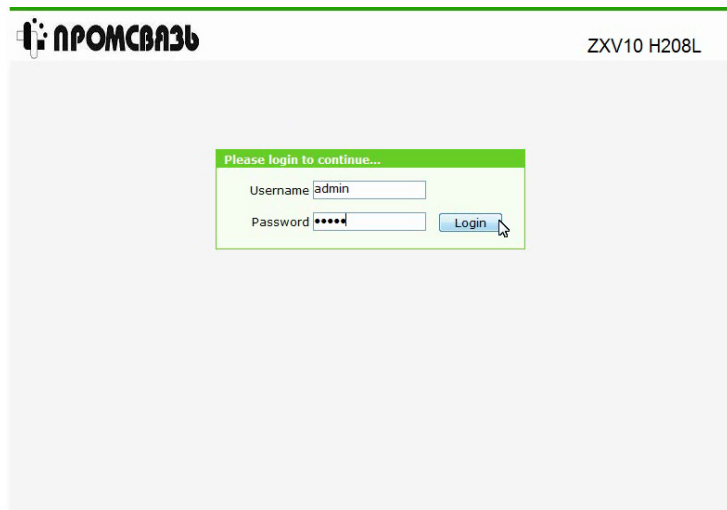

В основном меню сверху выберите вкладку «Network», далее слева раздел «WLAN».

**ПРОМСВЯЗЬ** ZXR10 H208L

Status Network Security Application Administration Logout

**-WAN**

- WAN Connection
- Port Mapping
- WLAN
- LAN
- Routing

Type: PPPoE

Connection Name: Create WAN Connection

New Connection Name:

Enable NAT:

Enable VLAN:

VLAN ID:

802.1p: 0

Enable DSCP:

DSCP:

VPI/VCI:

Encapsulation Type: LLC

Service Type: UBR

MTU: 1400

PPPoE pass-through:

Username:

Password:

Выберите подраздел «Multi-SSID».

**WAN**

**-WLAN**

- Basic
- Multi-SSID
- Security
- Access Control List
- Associated Devices

**LAN**

Routing

Choose SSID: SSID1

Hide SSID:

Enable SSID:

Enable SSID Isolation:

Maximum Clients: 8 (1 ~ 32)

SSID Name: ZTE (1 ~ 32 characters)

Priority: 0

Submit Cancel

Copyright © 2011 ZTE Corporation. All rights reserved.

Поставьте «галочку» в поле «Enable SSID».

**ПРОМСВЯЗЬ** ZXR10 H208L

Status Network Security Application Administration Logout

**WAN**

**-WLAN**

- Basic
- Multi-SSID
- Security
- Access Control List
- Associated Devices

**LAN**

Routing

Choose SSID: SSID1

Hide SSID:

Enable SSID:

Enable SSID Isolation:

Maximum Clients: 8 (1 ~ 32)

SSID Name: ZTE (1 ~ 32 characters)

Priority: 0

Submit Cancel

Copyright © 2011 ZTE Corporation. All rights reserved.

Для установки имени сети Wi-Fi используйте поле «SSID Name».

Укажите в данном поле уникальное имя для Вашей беспроводной сети.

Для сохранения настроек нажмите кнопку «Submit».

The screenshot shows the ZTE ZXV10 H208L web interface. The top navigation bar includes 'Status', 'Network', 'Security', 'Application', 'Administration', and 'Logout'. The left sidebar shows 'WAN' and '-WLAN' sections, with 'Basic' selected under '-WLAN'. The main content area is titled 'WLAN Basic' and contains the following fields: 'Choose SSID' (dropdown menu with 'SSID1' selected), 'Hide SSID' (checkbox, unchecked), 'Enable SSID' (checkbox, checked), 'Enable SSID Isolation' (checkbox, unchecked), 'Maximum Clients' (text input with '8' and a range '(1 ~ 32)'), 'SSID Name' (text input with 'byfly' and a range '(1 ~ 32 characters)'), and 'Priority' (dropdown menu with '0' selected). At the bottom, there are 'Submit' and 'Cancel' buttons. The footer contains the text 'Copyright © 2011 ZTE Corporation. All rights reserved.'

Для изменения пароля к сети Wi-Fi выберите подраздел «Security» раздела «WLAN».

The screenshot shows the ZTE ZXV10 H208L web interface. The top navigation bar includes 'Status', 'Network', 'Security', 'Application', 'Administration', and 'Logout'. The left sidebar shows 'WAN' and '-WLAN' sections, with 'Security' selected under '-WLAN'. The main content area is titled 'WLAN Security' and contains the following fields: 'Choose SSID' (dropdown menu with 'SSID1' selected), 'Authentication Type' (dropdown menu with 'WPA2-PSK' selected), 'WPA Passphrase' (text input with '12345678' and a range '(8 ~ 63 characters)'), 'Enable WPA Group Key Update' (checkbox, unchecked), 'WPA Group Key Update Interval' (text input with 'sec' and a range '(1 ~ 32)'), and 'WPA Encryption Algorithm' (dropdown menu with 'AES' selected). At the bottom, there are 'Submit' and 'Cancel' buttons. The footer contains the text 'Copyright © 2011 ZTE Corporation. All rights reserved.'

Очистите поле «WPA Passphrase» и введите пароль, который в дальнейшем будет использоваться при подключении к Вашей сети Wi-Fi.

The screenshot shows the ZTE ZXV10 H208L web interface. The top navigation bar includes 'Status', 'Network', 'Security', 'Application', 'Administration', and 'Logout'. The left sidebar shows 'WAN' and '-WLAN' sections, with 'Security' selected under '-WLAN'. The main content area is titled 'WLAN Security' and contains the following fields: 'Choose SSID' (dropdown menu with 'SSID1' selected), 'Authentication Type' (dropdown menu with 'WPA2-PSK' selected), 'WPA Passphrase' (text input with 'yfly12345678' and a range '(8 ~ 63 characters)'), 'Enable WPA Group Key Update' (checkbox, unchecked), 'WPA Group Key Update Interval' (text input with 'sec' and a range '(1 ~ 32)'), and 'WPA Encryption Algorithm' (dropdown menu with 'AES' selected). At the bottom, there are 'Submit' and 'Cancel' buttons. The footer contains the text 'Copyright © 2011 ZTE Corporation. All rights reserved.'

Для сохранения настроек нажмите кнопку «Submit».

The screenshot shows the web management interface for a ZTE ZXV10 H208L device. The top navigation bar includes 'Status', 'Network', 'Security', 'Application', 'Administration', and 'Logout'. The left sidebar has sections for 'WAN', '-WLAN', 'Basic', 'Multi-SSID', 'Security', 'Access Control List', 'Associated Devices', 'LAN', and 'Routing'. The main content area is titled 'WLAN' and contains the following settings:

- Choose SSID:
- Authentication Type:
- WPA Passphrase:  (8 ~ 63 characters)
- Enable WPA Group Key Update:
- WPA Group Key Update Interval:  sec
- WPA Encryption Algorithm:

At the bottom of the form, there are 'Submit' and 'Cancel' buttons. The footer contains the text: 'Copyright © 2011 ZTE Corporation. All rights reserved.'

Настройка беспроводного соединения на модеме завершена!

**При возникновении вопросов необходимо обратиться в службу технической поддержки по номеру 123.**